

## MANUAL RELEASE OPERATION

To manually operate gate, **turn power off to the operator**, unlock the quick release (*if locked*) and hold down while manually pulling gate open.

