
V DUAL

The Dual Kit consists of (2) interface modules and (2) internal cables.


Both gates are connected together using Beldon 8102 or equivalent to be supplied by the installer.

The cable should be run in buried conduit from controller to controller. This cable is a low capacitance communications cable and should only be substituted (*if necessary*) with cable that has equivalent capacitance specifications.

MASTER SLAVE Interface Module Interface Module

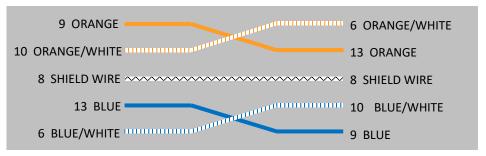



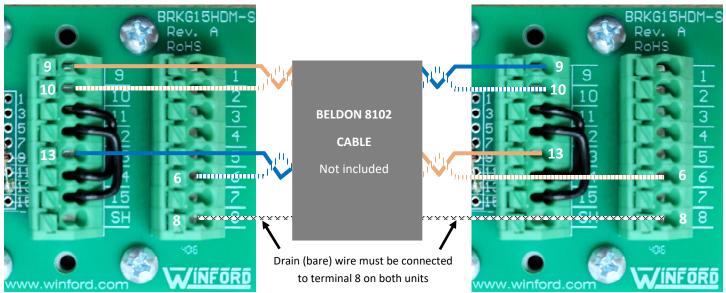

Note: ORANGE & ORANGE /WHITE and BLUE & BLUE/WHITE must be a twisted pair. If in doubt ohm out pairs or use a tone sniffer.

Connect the included data cable from the PLC to the interface module on both operators.

Using the programmer go to **575TEM**

Set the master side to **DUAL/MASTER** & the slave side to **DUAL/SLAVE** with the programmer

- The AUTO CLOSE timer must be ENABLED on both gates. The MASTER (primary) determines the close time.
- Use FREE EXIT TB2 -9 & -10 to test dual operation.
- The programmer will operate only the gate it is connected to.

A latch time of 1 second minimum is required to active both gates.