


RELAY K9 SOLID STATE CONVERSION

Turn power off to operator before proceeding.


K9 switches the power to the UL325 entrapment devices during the safety monitor test each cycle.

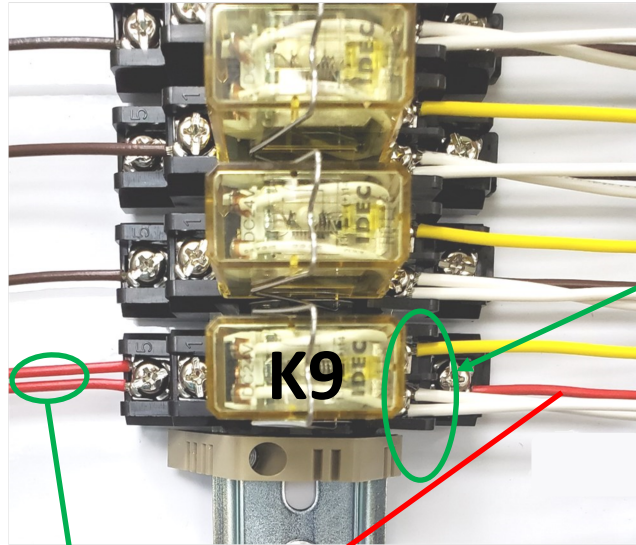

Relocate both red wires to the top connector 'N/O' of solid state relay socket base.

If the yellow and two white wires are connected as shown, they must be **reversed** for solid state use.

Relocate this red wire to the left bottom connector of solid state relay socket base. 'COM'

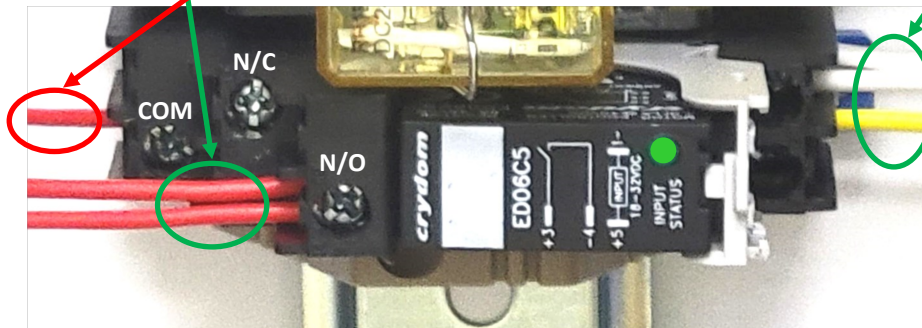

Yellow wire must be below white wires